

**INJECTION PUMP/NOZZLE HOLDER**

POS.	CODE	DESCRIPTION	Qty
01	937R.046	fuel pipe from feed pump to inj.pump	1
01a	937R.047	fuel pipe from fuel filter to inj.pump	1
02	937R.037	dearetion pipe	1
02a	938R.024	dearetion pipe	1
03	676R.088	stud	2
04	771R.097	washer	2
05	858R.094	brace	2
06	754R.035	washer	2
06	754R.051	washer	2
07	«-----»	nozzle - see Pos. E 08	0
07	644R.068	nozzle Stanadyne	2
08	644R.047	nozzle-holder Stanadyne	3
08	644R.056	nozzle-holder Bosch	2
09	«-----»	clamp dia 9-11	0
10a	9571.252	purge hose	0
11	540R.079	spring	2
12	837R.030	shim	2
12	837R.035	shim	2
13	754R.050	washer	2
14	4670.062	copper gasket diam. 6,2 X 10 X 1,5	2
15	7260.053	connection EPA version	2
16	«-----»	banjo union diam. 6	0
17	944R.067	injection fuel pipe	2
18	«-----»	purge hose	0
19	323R.003	nut	2
20	«-----»	union	0
21	4670.058	copper gasket diam. 8,2X12X1,5	4
22	1901.012	union bolt	2
23	4670.060	copper gasket diam.12	4
24	450R.065	gasket	2
24	450R.066	gasket	2
24	450R.067	gasket	2
25	6780.068	stud M 8 X 18 (30)	2
26	656R.060	injection pump	2
28	7215.035	tappet	2
29	660R.024	pumping element	2
30	956R.043	valve	2
31	5755.034	spring	2
32	8335.029	washer seal	2
33	7470.003	filler	2
34	1200.279	O ring	2
35	7265.008	union	2
36	3203.099	nut	4
37	716R.017	union	2
39	738R.010	plug	2

E

25LD

